

GLOBAL COMMANDS

To switch menus, press # then 1-6.
To enter frequency, press * + 7 digits, then
press * or # to set VFOA or VFOB. --> *0141700*
To Play VFOA press * * To Play VFOB press # #.
Always end the call, by sending * #.

SINGLE DIGIT COMMANDS

Active in the current menu

MULTIPLE DIGIT COMMANDS

MENU #1, RECEIVE: To recall or set memories, press 7 or 9 then the 2 digit memory number. Press * while scanning to find out current freq. MENU #2, ANTENNA: Rotate antenna by pressing 4 or 5 + the 3 digit bearing.

REMUTESHACK.COM

No.	Freq. (Hz)	No.	Freq. (Hz)	No.	Freq. (Hz)	No.	Freq. (Hz)
01	67.0	11	97.4	21	136.5	31	192.8
02	71.9	12	100.0	22	141.3	32	203.5
03	74.4	13	103.5	23	146.2	33	210.7
04	77.0	14	107.2	24	151.4	34	218.1
05	79.7	15	110.9	25	156.7	35	225.7
06	82.5	16	114.8	26	162.2	36	233.6
07	85.4	17	118.8	27	167.9	37	241.8
80	88.5	18	123.0	28	173.8	38	250.3
09	91.5	19	127.3	29	179.9		
10	94.8	20	131.8	30	186.2		

MENU #3, FILTER: To change mode, press 6 followed by 1-5 for LSB, USB,CW,FM or AM. To turn off a filter function, press 0 followed by 1-5. Press 00 to turn them all off. MENU #4, TRANSMIT: To set the tone, press 7 followed by the 2 digit tone(see chart). To set the shift, press 8 followed by 1,2 or 3(SIM, + or -). To set RF power, press 9 followed by 1,2,3 or 4(25%,50%,75%,Full Power). To turn off a TX function, press 0 followed by 2-6. Press 00 to turn all TX functions off (except the amplifier). MENU #5, SETTINGS: Press 7 followed by the number of rings to answer a call. MENU #6, AUXILLARY: Press the desired auxillary, then press 0 or 1 to turn on or off.